



Connector name	Description				
A SD memory card installation connector	Install the SD memory card. Do not plug or unplug the SD memory card during measurement operation. Otherwise measurement time may be affected or data may be destroyed.				
B Ethernet connector	Connect an Ethernet device. <table border="1"> <thead> <tr> <th>Camera 2ch type</th><th>Camera 4ch / 8ch type</th></tr> </thead> <tbody> <tr> <td> Ethernet port and EtherNet/IP port are sharing use. </td><td> Upper port : Ethernet port Lower port : Ethernet port and EtherNet/IP port are sharing use. </td></tr> </tbody> </table>	Camera 2ch type	Camera 4ch / 8ch type	Ethernet port and EtherNet/IP port are sharing use.	Upper port : Ethernet port Lower port : Ethernet port and EtherNet/IP port are sharing use.
Camera 2ch type	Camera 4ch / 8ch type				
Ethernet port and EtherNet/IP port are sharing use.	Upper port : Ethernet port Lower port : Ethernet port and EtherNet/IP port are sharing use.				
C USB connector	Connect a USB device. Do not plug or unplug it during measurement and accessing USB device. Measurement time might be affected otherwise.				
D RS-232C connector	Connect an external device such as a PLC.				
E Monitor connector	Connect a monitor.				
F I/O(Parallel) connector(control lines, data lines)	Connect the controller to external devices such as a sync sensor and PLC.				
G EtherCAT address setup volume	Used to set a station address (00 to 99) as an EtherCAT communication device.				
H EtherCAT communication connector (IN)	Connect the opposed EtherCAT device.				
I EtherCAT communication connector (OUT)	Connect the opposed EtherCAT device.				
J Encoder connector	Connect an encoder.				
K Camera connector	Connect cameras.				
L Power supply terminal connector	Connect a DC power supply. Wire the FH Sensor Controller independently on other devices. Wire the ground line. Be sure to ground the FH Sensor Controller alone. Perform wiring using the attached terminal block connector (FH-XCN) as referring to the description of wiring that connector.				

Parallel Interface

Common use to all NPN/PNP models. Wire appropriately according to the specification of the external device.

Internal Specification (for NPN Connection)

[Input] Applicable signals/
No.14 pin : Connect the COMIN1 terminal when using these signals.
No.37 to 46 pins : Connect the COMIN2 terminal when using these signals.

Input voltage	12-24VDC ±10%
ON current *1	Min. 5mA
ON voltage *1	Min. 8.8V
OFF current *2	Max. 0.5mA
OFF voltage *2	Max. 1.1V
ON delay	5ms or less
OFF delay	0.7ms or less
Internal circuit diagram	

*1 ON current/voltage means the current or voltage value to activate the terminal. The ON voltage value is the potential difference between COM IN and each input terminal.

*2 OFF current/voltage means the current or voltage value to deactivate the terminal. The OFF voltage value is the potential difference between COM IN and each input terminal.

[Output] Applicable signals/
No.15 to 19 pin, No.28 to 32pin : Connect the COMOUT0 terminal when using these signals.
No.48 to 57 pins : Connect the COMOUT2 terminal when using these signals.
No.58 to 66 pins : Connect the COMOUT3 terminal when using these signals.

Output voltage	12-24VDC ±10%
Load current *	45mA or less
ON residual voltage	2V or less
OFF leakage current	0.2mA or less
Internal circuit diagram	

* The current value must be the specified load current or lower. Exceeding the specified current value may cause damage of the output circuit.

Internal Specification (for PNP Connection)

[Input] Applicable signals/
No.14 pin : Connect the COMIN1 terminal when using these signals.
No.37 to 46 pint : Connect the COMIN2 terminal when using these signals.

Input voltage	12-24VDC ±10%
ON current *1	Min. 5mA
ON voltage *1	Min. 8.8V
OFF current *2	Max. 0.5mA
OFF voltage *2	Max. 1.1V
ON delay	5ms or less
OFF delay	0.7ms or less
Internal circuit diagram	

*1 ON current/voltage means the current or voltage value to activate the terminal. The ON voltage value is the potential difference between COM IN and each input terminal.

*2 OFF current/voltage means the current or voltage value to activate the terminal. The OFF voltage value is the potential difference between COM IN and each input terminal.

[Output] Applicable signals/
No.15 to 19 pin, No.28 to 32 pin : Connect the COMOUT0 terminal when using these signals.
No.48 to 57 pins : Connect the COMOUT2 terminal when using these signals.
No.58 to 66 pins : Connect the COMOUT3 terminal when using these signals.

Output voltage	12-24VDC ±10%
Load current *	45mA or less
ON residual voltage	2V or less
OFF leakage current	0.2mA or less
Internal circuit diagram	

* The current value must be the specified load current or lower.Exceeding the specified current value may cause damage of the output circuit.

I/O Connectors

The signal names and the role of terminals vary depending on the settings of the operation mode of the FH sensor controller. Check the settings and wire correctly.(About the operation mode, please refer to the Vision Sensor FH / FZ5 Series Vision System User's Manual.)


	No	I/O	XW2Z-S013- Connector-Terminal Block Conversion Units Wire color	XW2R-34G-T Connector-Terminal Block Conversion Units General-purpose devices	Signal name				Remarks
					In the 1-line mode	In the 2-line random mode	In the 3 to 4-line random mode	In the 5 to 8-line random mode	
CN1	1	—	Ped	A1			COMINO		COMINO 2 : Common 0 to 2 for input signals COMOUT0 to 3 : Common 0 to 3 for output signals
	2	—	Gray	B1			COMIN1		
	3	—	Gray	A2			Vacant		
	4	IN	Gray	B2	STEP0ENCRIG_Z0 (*1)	STEP0ENCRIG_Z1 (*2)	STEP0	STEP0	COMINO 0 to 2 : Common 0 to 2 for input signals COMOUT0 to 3 : Common 0 to 3 for output signals DI0 to 7 : Command inputs DILINE0 to 2 : Command inputs (line specified) DSA0 to 1 : Data transmission request ENCRIG_A0 to 1 : Encoder trigger input (phase A) ENCRIG_B0 to 1 : Encoder trigger input (phase B) ENCRIG_Z0 to 1 : Encoder trigger input (phase Z) STEP0 to 7 : Measurement trigger input
	5	IN	Green	A3	Unused (*5)	Unused (*5)	STEP1	STEP1	
	6	IN	Gray	B3	Unused (*5)	Unused (*5)	STEP2	STEP2	
	7	IN	Gray	A4	Unused (*5)	Unused (*5)	STEP3	STEP3	
	8	IN	Gray	B4	ENCRIG_AO (*1)	ENCRIG_A0 (*2)	Unused (*5)	Unused (*5)	
	9	IN	Gray	A5	Unused (*5)	Unused (*5)	Unused (*5)	STEP4	
	10	IN	Green	B5	Unused (*5)	Unused (*5)	Unused (*5)	STEP5	
	11	IN	Gray	A6	Unused (*5)	ENCRIG_A1(*2)	Unused (*5)	STEP6	
	12	IN	Gray	B6	Unused (*5)	ENCRIG_B1 (*2)	Unused (*5)	STEP7	
	13	IN	Gray	A7	ENCRIG_B0 (*1)	ENCRIG_B0 (*2)	Unused (*5)	Unused (*5)	
	14	IN	Gray	B7	Unused (*5)		DILINE0		
	15	OUT	Green	A8	RUN0	RUN0	RUN0	READY0	
	16	OUT	Gray	B8	READY0	READY0	READY0	BUSY0	
	17	OUT	Gray	A9	BUSY0	BUSY0	BUSY0	OR0	
	18	OUT	Gray	B9	OR0	OR0	OR0	READY1	
	19	OUT	Gray	A10	ERROR0	ERROR0	ERROR0	BUSY1	
	20	OUT	Green	B10	STGOUT0 (*3)/SHTOUT0	STGOUT0 (*3)/SHTOUT0	STGOUT0 (*3)/SHTOUT0	STGOUT0 (*3)/SHTOUT0	ACK : Instruction execution completion flag BUSY0 to 7 : ON during processing DO0 to 15 : Data output ERROR : ON when an error occurs (*4) ERROR0 to 3 : ON when an error occurs GATE0 to 1 : ON during configured output time ORO to 7 : Overall judgement result READY0 to 7 : ON when image input is allowed RUN0 to 3 : ON while the layout turned on output setting is displayed SHTOUT0 to 7 : Shutter output STGOUT0 to 7 : Strobe trigger output(*3)
	21	OUT	Gray	A11	STGOUT1 (*3)	STGOUT1 (*3)/SHTOUT1	STGOUT1 (*3)/SHTOUT1	STGOUT1 (*3)/SHTOUT1	
	22	OUT	Gray	B11	STGOUT2 (*3)	STGOUT2 (*3)	STGOUT2 (*3)/SHTOUT2	STGOUT2 (*3)/SHTOUT2	
	23	OUT	Gray	A12	STGOUT3 (*3)	STGOUT3 (*3)/SHTOUT3	STGOUT3 (*3)/SHTOUT3	STGOUT3 (*3)/SHTOUT3	
	24	OUT	Gray	B12	STGOUT4 (*3)	STGOUT4 (*3)	STGOUT4 (*3)	STGOUT4 (*3)/SHTOUT4	
	25	OUT	Green	A13	STGOUT5 (*3)	STGOUT5 (*3)	STGOUT5 (*3)	STGOUT5 (*3)/SHTOUT5	
	26	OUT	Gray	B13	STGOUT6 (*3)	STGOUT6 (*3)	STGOUT6 (*3)	STGOUT6 (*3)/SHTOUT6	
	27	OUT	Gray	A14	STGOUT7 (*3)	STGOUT7 (*3)	STGOUT7 (*3)	STGOUT7 (*3)/SHTOUT7	
	28	OUT	Gray	B14	Unused (*5)	RUN1	RUN1	OR1	
	29	OUT	Gray	A15	Unused (*5)	READY1	READY1	READY2	
	30	OUT	Green	B15	Unused (*5)	BUSY1	BUSY1	BUSY2	
	31	OUT	Gray	A16	Unused (*5)	OR1	OR1	OR2	
	32	OUT	Gray	B16	Unused (*5)	ERROR1	ERROR1	READY3	
	33	—	Gray	A17			COMOUT0		
	34	—	Gray	B17			COMOUT1		
CN2	35	—	Ped	A1			COMIN2		COMINO 2 : Common 0 to 2 for input signals COMOUT0 to 3 : Common 0 to 3 for output signals
	36	—	Gray	B1			Vacant		
	37	IN	Gray	A2	DSA0	DSA0	DILINE1	DILINE1	
	38	IN	Gray	B2	Unused (*5)	DSA1	Unused (*5)	DILINE2	ACK : Instruction execution completion flag BUSY0 to 7 : ON during processing DO0 to 15 : Data output ERROR : ON when an error occurs (*4) ERROR0 to 3 : ON when an error occurs GATE0 to 1 : ON during configured output time ORO to 7 : Overall judgement result READY0 to 7 : ON when image input is allowed RUN0 to 3 : ON while the layout turned on output setting is displayed SHTOUT0 to 7 : Shutter output STGOUT0 to 7 : Strobe trigger output(*3)
	39	IN	Green	A3			DI0		
	40	IN	Gray	B3			DI1		
	41	IN	Gray	A4			DI2		
	42	IN	Gray	B4			DI3		
	43	IN	Gray	A5			DI4		
	44	IN	Green	B5			DI5		
	45	IN	Gray	A6			DI6		
	46	IN	Gray	B6			DI7		
	47	—	Gray	A7			Vacant		
	48	OUT	Gray	B7			ACK		
	49	OUT	Green	A8	GATE0	GATE0	RUN2	BUSY3	
	50	OUT	Gray	B8	Unused (*5)	GATE1	READY2	OR3	
	51	OUT	Gray	A9	DO0	DO0	BUSY2	READY4	
	52	OUT	Gray	B9	DO1	DO1	OR2	BUSY4	
	53	OUT	Gray	A10	DO2	DO2	ERROR2	OR4	
	54	OUT	Green	B10	DO3	DO3	RUN3	READY5	
	55	OUT	Gray	A11	DO4	DO4	READY3	BUSY5	
	56	OUT	Gray	B11	DO5	DO5	BUSY3	OR5	
	57	OUT	Gray	A12	DO6	DO6	OR3	READY6	
	58	OUT	Gray	B12	DO7	DO7	ERROR3	BUSY6	
	59	OUT	Green	A13	DO8	DO8	Unused (*5)	OR6	
	60	OUT	Gray	B13	DO9	DO9	Unused (*5)	READY7	
	61	OUT	Gray	A14	DO10	DO10	Unused (*5)	BUSY7	
	62	OUT	Gray	B14	DO11	DO11	Unused (*5)	OR7	
	63	OUT	Gray	A15	DO12	DO12	Unused (*5)	Unused (*5)	
	64	OUT	Green	B15	DO13	DO13	Unused (*5)	Unused (*5)	
	65	OUT	Gray	A16	DO14	DO14	Unused (*5)	Unused (*5)	
	66	OUT	Gray	B16	DO15	DO15	Unused (*5)	ERROR (*4)	
	67	—	Gray	A17			COMOUT2		COMINO 2 : Common 0 to 2 for input signals COMOUT0 to 3 : Common 0 to 3 for output signals
	68	—	Gray	B17			COMOUT3		

*1 To use a measurement trigger input, use the STEP signal. To use an encoder input, use ENCRIG_A0/B0/Z0.
*2 In the 2-line random mode, to use a measurement trigger input and a line of encoder input, use ENCRIG_A0/B0/Z0 and STEP1.
*3 This is the signal used when using a strobe signal for the FH Sensor Controller.
*4 This is the ERROR signal commonly used in 1 to 8-line modes.
*5 Do not connect anything for Unused.

Connection

Connect the parallel I/O cable with more than the minimum bending radius.

Pin Assignment

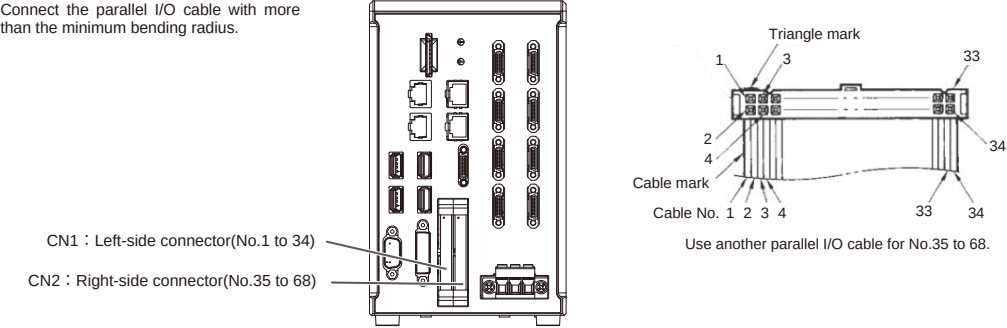

Name	Model	Descriptions	Remarks
Parallel I/O Cable	XW2Z-S013-□	FH Sensor Controllers only Cable length: 2 m or 5 m Min bending radius: 10mm	• 2 Cables are required for all I/O signals. • This cable is the type of one side flat cable and another side connector. • Connect the parallel I/O cable with more than the minimum bending radius. • Insert the cables length into □ in the model number as follows. 2=2m, 5=5m
Parallel I/O Cable for Connector-terminal Conversion Unit	XW2Z-□□□EE	FH Sensor Controllers only Cable length: 0.5m,1m,1.5m,2m,3m,5m Min bending radius: 83.2mm	• 2 Cables are required for all I/O signals. • Connect the parallel I/O cable with more than the minimum bending radius. • Insert the cables length into □ in the model number as follows. 050=0.5m, 100=1m, 150=1.5m, 200=2m, 300=3m, 500=5m • Connector-Terminal Block Conversion Units can be connected (Terminal Blocks Recommended Products: OMRON XW2R-□34G-T)
Connector-Terminal Block Conversion Units, General-purpose devices	XW2R-□34G-T		• Insert the wiring method into @ in the model number as follows. Phillips screw = J, Slotted screw (rise up) = E, Push-in spring = P Refer to the XW2R Series catalog (Cat. No. G077) for details.

Encoder Interface (Line Driver Type)


Specification of Encoder Interface (Line Driver Output Type)

Item	Specifications
Input voltage	Input voltage : 5VDC±5% Signal level : EIA Standard, RS-422-A line driver level
Input impedance *1	120Ω±5%
Differential input voltage	High-level input voltage 0.1V, Low-level input voltage -0.1V
Hysteresis voltage	60mV
Maximum response frequency *2	Phase A/B/Z: 1MHz (When using an I/O cable, model FH-VR 1.5M)


*1 Value when the terminal resistance function is used.
*2 Use this interface as paying attention to the cable length and response frequency of the encoder used.

I/O Connector


No	Signal name	Color	Remarks
1	ENC0 A+	Black	Signal : Ch1 A-Phase(+)
2	ENC0 A-	Black/Red	Signal : Ch1 A-Phase(-)
3	ENC0 VDD	Brown	Power : Power supply for Ch1 (5VDC)
4	ENC0 B+	White	Signal : Ch1 B-Phase(+)
5	ENC0 B-	White/Red	Signal : Ch1 B-Phase(-)
6	ENC0 GND	Blue	Power : Signal ground for Ch1 (0V)
7	ENC0 Z+	Orange	Signal : Ch1 Z-Phase(+)
8	ENC0 Z-	Orange/Red	Signal : Ch1 Z-Phase(-)
9	NC	—	Not connected
10	ENC1 A+	Purple	Signal : Ch2 A-Phase(+)
11	ENC1 A-	Purple/Red	Signal : Ch2 A-Phase(-)
12	ENC1 VDD	Brown/Red	Power : Power supply for Ch2 (5VDC)
13	ENC1 B+	Pink	Signal : Ch2 B-Phase(+)
14	ENC1 B-	Pink/Red	Signal : Ch2 B-Phase(-)
15	ENC1 GND	Blue/Red	Power : Signal ground for Ch2 (0V)
16	ENC1 Z+	Yellow	Signal : Ch2 Z-Phase(+)
17	ENC1 Z-	Yellow/Red	Signal : Ch2 Z-Phase(-)

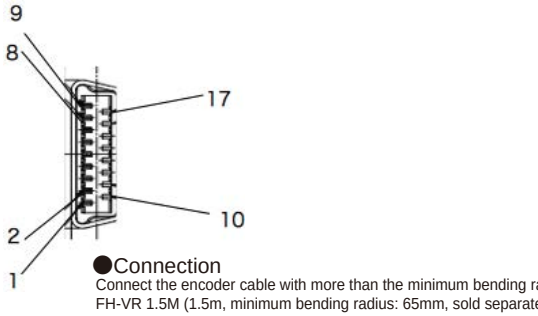

Circuit Schematics

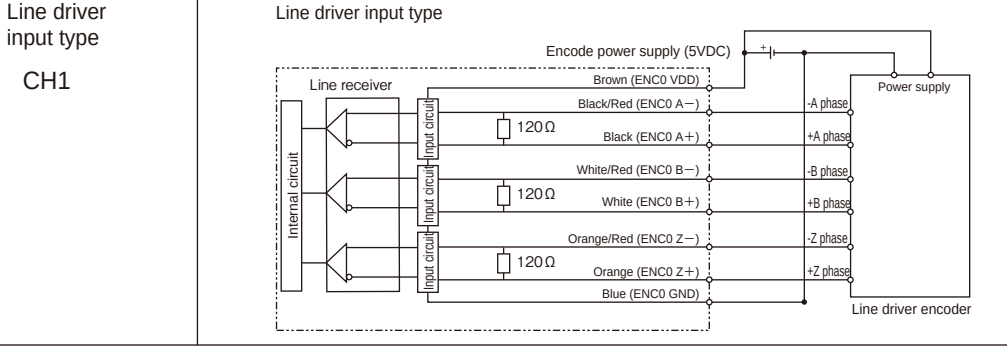

Line driver input type

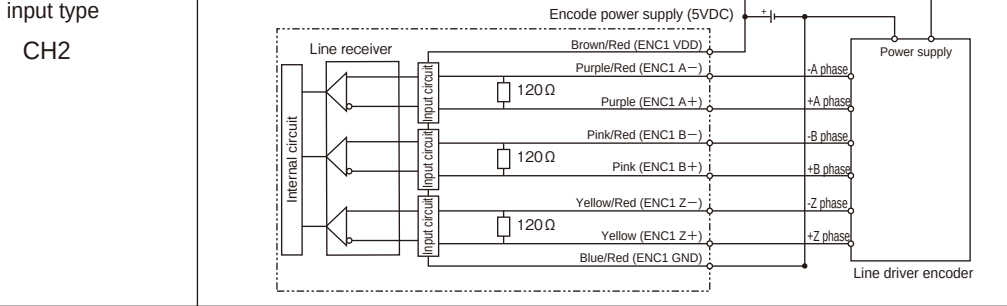

Camera cable

The maximum cable length depends on the Camera being connected,and the model and length of the Cable being used. For further information,please refer to the “Cameras/Cables Connection Table”. Be sure to secure at least the minimum bending radius of the cable.

Cameras/Cables Connection Table(Connecting to FH-S Series Camera)

Type of camera	Model	Cable length	High-speed CMOS cameras *					
			300,000-pixel FH-SM/SC	2 million-pixel FH-SM02/SC02	4 million-pixel FH-SM04/SC04	12 million-pixel FH-SM12/SC12		
			—	High speed mode of transmission speed select	Standard mode of transmission speed select	High speed mode of transmission speed select	Standard mode of transmission speed select	Standard mode of transmission speed select
Camera Cable	FZ-VS3	2m 3m	Yes Yes	Yes Yes	Yes Yes	Yes Yes	Yes Yes	Yes Yes
Right-angle camera cable	FZ-VSL3	5m 10m	Yes Yes	Yes No	Yes Yes	Yes Yes	Yes No	Yes Yes
Bend resistant camera cable	FZ-VSB3	2m 3m	Yes Yes	Yes Yes	Yes Yes	Yes Yes	Yes Yes	Yes Yes
Bend resistant right-angle camera cable	FZ-VSLB3	5m 10m	Yes Yes	Yes No	Yes Yes	Yes Yes	Yes No	Yes Yes
Long-distance camera cable	FZ-VS4							
Long-distance right-angle camera cable	FZ-VSL4	15m	Yes	No	Yes	No	Yes	No Yes

* High-speed CMOS camera is only for the FH series.

Cameras/Cables Connection Table(Connecting to FZ-S Series Camera)

Type of camera	Model	Cable length	Digital CCD cameras			Small digital CCD cameras Pen type/flat type	High-speed CCD camera	Intelligent compact CMOS cameras
			300,000-pixel	2 million-pixel	5 million-pixel			
			FZ-S/SC	FZ-S2M/SC2M	FZ-S5M2/SC5M2	FZ-SF/SFC FZ-SP/SPC	FZ-SH/SHC	FZ-SQ□
Camera Cable	FZ-VS3	2m	Yes	Yes	Yes	Yes	Yes	Yes
Right-angle camera Cable	FZ-VSL3	3m 5m 10m	Yes Yes Yes	Yes Yes No	Yes Yes Yes	Yes Yes Yes	Yes Yes Yes	Yes Yes Yes
Bend resistant camera cable	FZ-VSB3	2m	Yes	Yes	Yes	Yes	Yes	Yes
Bend resistant right-angle camera cable	FZ-VSLB3	3m 5m 10m	Yes Yes Yes	Yes Yes No	Yes Yes Yes	Yes Yes Yes	Yes Yes Yes	Yes Yes Yes
Long-distance camera cable	FZ-VS4							
Long-distance right-angle camera cable	FZ-VSL4	15m	Yes	Yes	No	Yes	Yes	Yes

Mounting of Ferrite core

Mount the ferrite core attached to the camera cable to near the Sensor Controller.

